INSIGNIA™

QUICK SETUP GUIDE

32" LED TV/DVD Combo

NS-32DD310NA15

Thank you

for purchasing this state-of-the-art Insignia television. We hope you enjoy the quality and reliability of this television for years to come.

FIND YOUR *USER GUIDE* ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online.

Go to www.insigniaproducts.com, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ▶.

1 START HERE

How do I attach the stand to my TV?

(not for wall mounting)

You'll need: A Phillips screwdriver and a soft surface to lay the TV on.

A Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.

B Secure the stand column to your TV with the five provided M4 x 8 mm screws. (the shorter screws).

C Secure the TV stand to the stand column with the four provided B4 x 18 mm screws. (the longer screws).

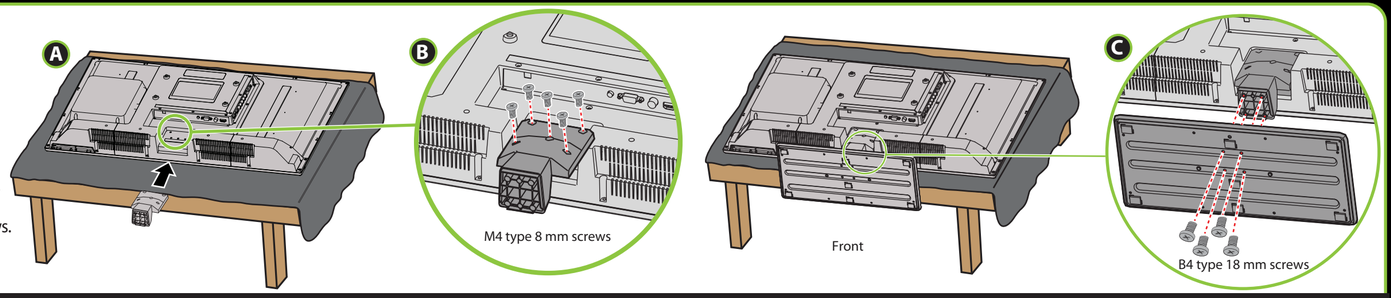

- OR -

How do I prepare my TV for wall mounting?

(not for use with a TV stand)

You'll need: A soft surface to lay the TV on.

A Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.

B See the instructions that came with your wall mount for more information about how to correctly mount your TV.

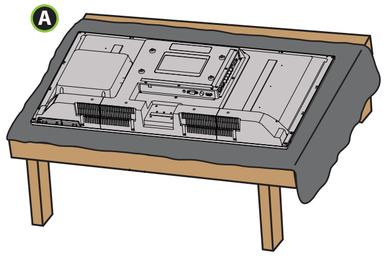

STOP!

Do not plug your power adapter in until all other devices have been connected.

Included accessories

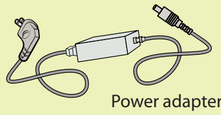

Power adapter

Remote control and two AAA batteries

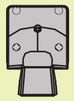

Stand column

TV stand



M4 screws (8 mm length) (5 pcs.)

B4 screws (18 mm length) (4 pcs.)

Which cables do you have?

Your TV has several different jacks for connecting devices. For the best video quality, use the best available connection. Use the cables that came with your devices.

VIDEO QUALITY	JACK TYPE	CABLE CONNECTOR
BEST	HDMI video/audio	
BETTER	Component video and analog audio	
GOOD	Composite video and analog audio (AV)	
GOOD	Coaxial video/audio	

Note: You can also connect a DVI device to your TV. See your online *User Guide* for connection instructions.

Features

Front view

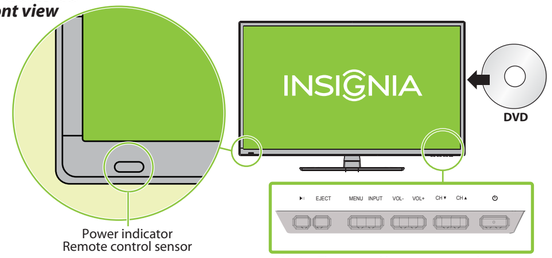

Note: The control buttons are on the bottom edge of the screen.

Back view

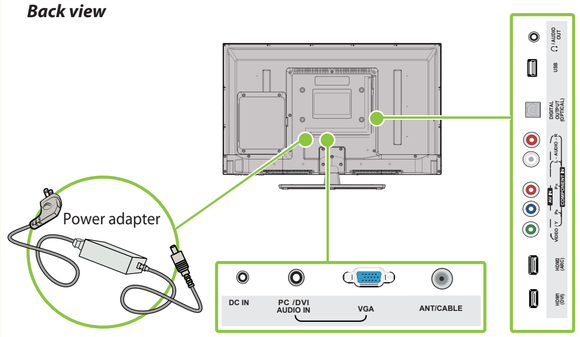

Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

How do I watch TV (cable or satellite receiver) or connect a device such as a DVD or Blu-ray Disc player, game console, or camcorder?

Using an HDMI cable **(BEST)**

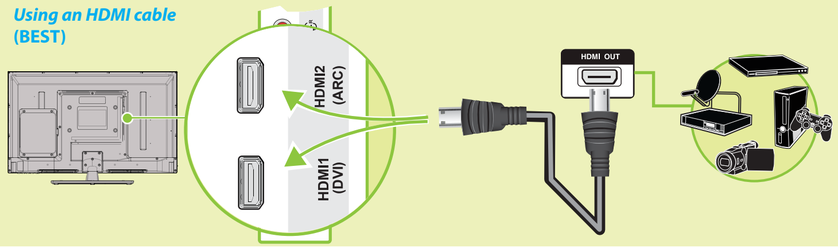

Multi-purpose jacks: You can plug any device that uses HDMI into either HDMI jack. However, certain devices must be connected to the DVI or ARC jack. See the instructions that came with your DVI or ARC device for more information.

Using component cables **(BETTER)**

- OR -

Using an AV cable **(GOOD)**

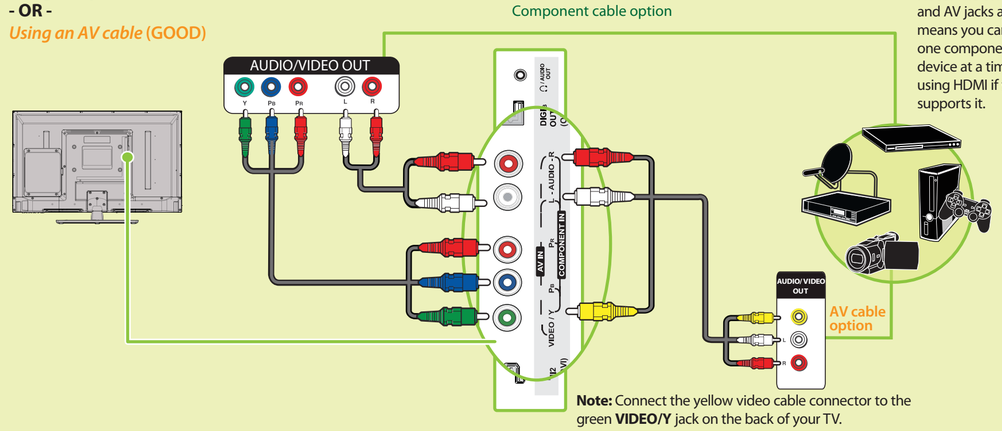

Note: The component video and AV jacks are shared. This means you can connect only one component video or AV device at a time. We suggest using HDMI if your device supports it.

Note: Connect the yellow video cable connector to the green **VIDEO/Y** jack on the back of your TV.

How do I connect my TV to an antenna or cable wall jack?

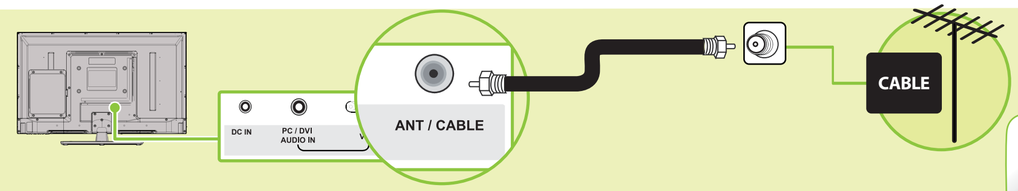

OVER

3 CONNECTING AUDIO DEVICES

How do I connect my TV to external speakers?

Using digital audio

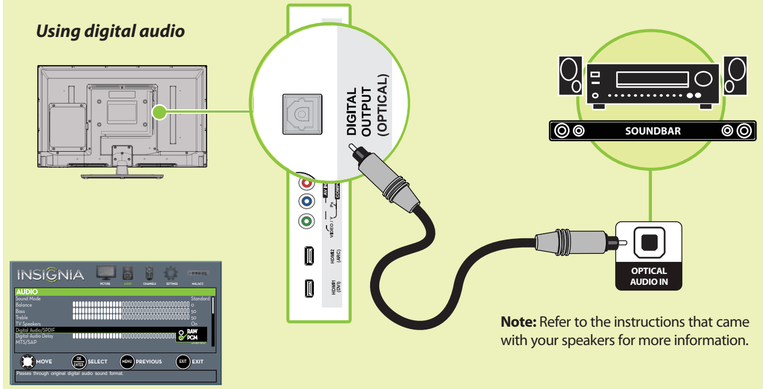

On your TV, set the **Digital Audio/SPDIF** option on the *AUDIO* menu to **PCM**.

Note: Refer to the instructions that came with your speakers for more information.

- OR -

Using analog audio

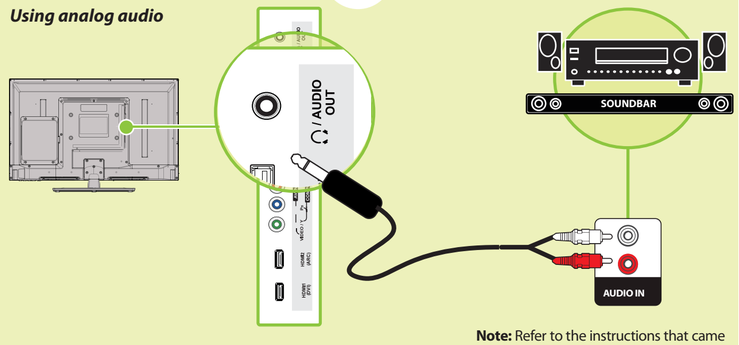

Note: Refer to the instructions that came with your speakers for more information.

4 TURNING ON MY TV

When can I turn on my TV?

The best time to turn on your TV is after you have attached the TV stand or wall-mounted your TV and connected all devices.

When your television is in place:

1. Plug the AC power adapter into the **DC IN** connector on the back of your TV.
2. Plug the other end of the cord into a power outlet.

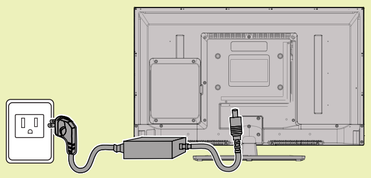

3. Install the remote control batteries. Remove the remote control cover and install the batteries, matching the + and - symbols.

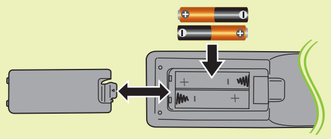

4. Press ⏻ (power) on your remote control.
5. Follow the on-screen instructions.

Using your remote control

Power
Turns your TV on or off.

Numbers
Enter channel numbers and parental control password.

•
Enters a digital sub-channel number (for example 4.1).

CCD
Turns closed captioning on or off.

MTS/SAP
Analog TV – Cycles through mono, stereo, and secondary audio for analog programs.
Digital TV – Selects the audio language for the current channel.

Volume
Changes the volume.

PICTURE
Selects the picture mode.

AUDIO
Selects the audio mode.

TV-MENU
Opens the on-screen menu.

OK
Confirms selections or opens a sub-menu.

HOME
Opens the on-screen menu.

Menu
Opens the DVD menu.

Setup
Opens the DVD system setup.

Media Controls
DVD—Navigate in DVD playback.
USB—Control the photo slideshow.
INlink—Control HDMI-CEC devices connected to your TV.

INPUT
Opens the *INPUT SOURCE* list.

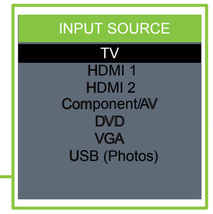

RECALL
Returns to the previous channel.

ASPECT
Changes how the picture is displayed on the screen.

FAVORITE
Opens the Favorite Channel List.

MUTE
Mutes the sound.

Channel
Changes the TV channels.

INFO*
Opens a TV status banner.

CH-LIST
Opens the channel list.

SLEEP
Sets the sleep timer.

Arrows
Navigate in on-screen menus.

EXIT
Closes the on-screen menu.

Quick Launch Inputs
Selects an HDMI device or the built-in DVD player.

Audio
Select a different DVD audio language, if available.

Subtitle
Selects the DVD subtitle language.

TITLE
Opens the DVD title menu if the DVD supports this feature.

What are my screen-size options?

NORMAL: Original aspect ratio is preserved. Black bars are present if content is not widescreen (16:9).

ZOOM: Expands the image to fill the screen. The top and bottom of the image may be cropped.

WIDE: Displays content recorded in a 16:9 (widescreen) aspect ratio.

CINEMA: Stretches the image at the edges, but keeps a clear image in the center.

AUTO: Automatically adjusts the image based on the screen size and the TV program. Select this option if you are uncertain which aspect ratio to choose. **Note: Auto** is only available when **Auto Zoom** in the *Channels* menu is set to **On**.

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

UNIVERSAL REMOTE TV CODES	
CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX	
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
Direct TV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Tivo	0091
Verizon	0198, 0490
UNIVERSAL REMOTE CONTROLS	
One for All	0054
Philips	0198, 0490
RCA	135
Sony	068, 069, 078, 096

For an up-to-date list of codes for other cable providers and universal remote brands, scan this **QR code** or visit www.insigniaproducts.com/remotecodes

INSIGNIA™

One-year limited warranty
Visit www.insigniaproducts.com for details.

Need additional help?
See your online *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ▶.

Check out our **Support Community** http://community.insigniaproducts.com/ for helpful information from other Insignia TV owners.

We're here for you
www.insigniaproducts.com
For customer service, call:
877-467-4289 (U.S./Canada)

INSIGNIA is a registered trademark of BBY Solutions, Inc.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC,
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 BBY Solutions, Inc.
All Rights Reserved
1-877-467-4289
www.insigniaproducts.com